PYROVIEW 640F



High-resolution infrared cameras for temperature measurement through flames



- ✓ Precise non-contact temperature measurement between 600 °C and 1250 °C
- ✓ Uncooled microbolometer array with 640 × 480 pixels
- ✓ Spectral range about 3.9 µm
- ✓ Numerous optics with motor focus
- ✓ Measurement frequency 50 frames per second
- ✓ Gigabit Ethernet interface (1 GBit/s)
- ✓ Large dynamic range and 16-Bit analog digital converter
- ✓ Camera in small compact+ housing (IP54) or industry protection housing (IP65)
- ✓ Integration in customized system solutions including hard- and software adjustment

Overview

The infrared camera PYROVIEW 640F is used when you have to measure through flames or combustion gasses due to application reasons. The flame though has no influence on the measurement. Whether in process monitoring, process automation or quality control — the PYROVIEW 640F measures temperatures without contact exactly and reliably. Also in very fast processes or at temperature changes the data acquisition happens in real-time.

In stationary industrial continuous operation measurement data is recorded with high spatial resolution on fixed or moving measurement objects. In this way production processes are monitored and controlled efficiently.


Therefore the Gigabit Ethernet interface guarantees a data acquisition without loss and with no appreciable time delay up to 50 images per second. The maximum image frequency of 50 Hz is adjusted optimally to the thermal time constant of the infrared array.

Numerous motor focus infrared lenses, including wide angle and telephoto lenses, provide a flexible adjustment to different measurement object sizes at different measurement distances.

The infrared camera is either built in a small aluminium housing "compact+" or in a stainless steel industry protection housing "protection" that has a protection window, an air purge unit and an optional watercooling.

The camera observes the production in stand-alone operation without any connected computer via two galvanically isolated digital inputs and outputs. All process parameters of the stand-alone version are programmed once on location via PC connection

The modular Windows software PYROSOFT of the camera can be adjusted and extended to process-related requirements. The free software PYROSOFT Compact is delivered with every PYROVIEW infrared camera.

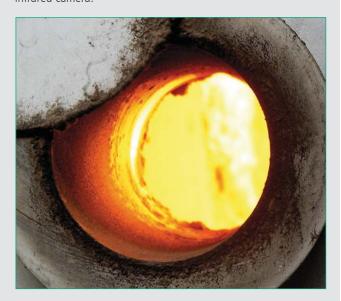

Made by DIAS Infrared

DIAS Infrared headquartered in Dresden (Germany) develops and manufactures high-quality precision devices as well as system solutions for non-contact temperature measurement. Challenging projects are a welcoming motivation for us. The customers appreciate the robust make, outstanding accuracy, superb reliability and the high service standard of our equipment technology.


PYROVIEW 640F



High-resolution infrared cameras for temperature measurement through flames

Device type	640F compact+	640F protection			
Spectral range ¹	3.9 µm				
Temperature ranges ¹	600 °C to 1250 °C				
NETD ^{2,3}	< 1 K (600 °C, 50 Hz)				
Aperature angle ⁴ (HFOV × VFOV)	$25^{\circ} \times 19^{\circ}$, optional: $75^{\circ} \times 60^{\circ}$, $59^{\circ} \times 46^{\circ}$, $43^{\circ} \times 33^{\circ}$, $12^{\circ} \times 9^{\circ}$ (optics with motor focus)				
Sensor	uncooled microbolometer array (640 × 480 pixels)				
Measurement uncertainty ³	2 % of measured value °C				
Measurement frequency ⁵	internal 50 Hz, selectable: 50 Hz, 25 Hz, 12,5 Hz,				
Response time	internal 40 ms , selectable: 2/measurement frequency				
Interfaces	Gigabit-Ethernet (real-time, 50 Hz), galvanically isolated digital inputs (trigger) and digital outputs (alarm)				
Connectors	round plug connector HR10A (12 pin, power supply, digital inputs and outputs), round plug connector M12A (Ethernet)	round plug connector M23 (16 pin, power supply, digita inputs and outputs), round plug connector M12A (Ethernet)			
Power supply	12 V to 36 V DC, typical 10 VA				
Weight	approx. 1.6 kg	approx. 4.2 kg			
Housing	aluminium compact housing IP54, 65 mm (L) \times 160 mm (W) \times 79 mm (H), without lens and connectors, optional with weather protection housing with pan-tilt-unit	industry protection housing IP65, stainless steel, with protection window, air purge and optional water cooling diameter 110 mm, length 280 mm (without mechanica mounting and connectors), 6 bar max. water pressure, 2 bar max. air pressure			
Operating temperature of the camera					
Storage conditions	−20 °C to 70 °C, max. 95 % rel. humidity				
Software	control and imaging software PYROSOFT for Windows ®, customized modifications on request				
Scope of delivery	infrared camera PYROVIEW 640F, calibration certificate, manual, software PYROSOFT Compact				

Optics variants (optics with motor focus)

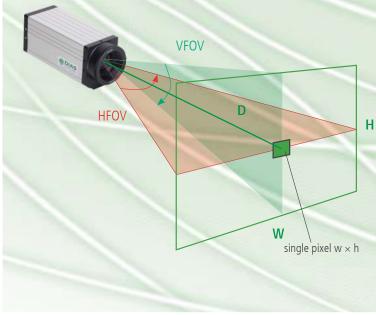

	HFOV × VFOV	D [m]	W [m]	H [m]	w [mm]	h [mm]
	IFOV					
	25° × 19°	1	0.44	0.33	0.7	0.7
		3	1.31	0.98	2	2
	0.7 mrad	10	4.35	3.26	7	7
	75° × 60°	1	1.53	1.15	2.4	2.4
		3	4.60	3.46	7.2	7.2
	2 mrad	10	15.35	11.55	24	24
	59° × 46°	1	1.13	0.85	1.8	1.8
		3	3.39	2.55	5.3	5.3
	1.6 mrad	10	11.32	8.49	17.7	17.7
	43° × 33°	1	0.79	0.59	1.2	1.2
		3	2.36	1.78	3.7	3.7
	1.2 mrad	10	7.88	5.92	12.3	12.3
	12° × 9°	1	0.22	0.16	0.3	0.3
		3	0.65	0.49	1	1
	0.3 mrad	10	2.18	1.63	3	3
1	M Imaga width					

HFOV ... Horizontal Field Of View (horizontal aperature angle)

VFOV ... Vertical Field Of View (vertical aperture angle)

IFOV ... Instantaneous Field Of View (spatial resolution)

D ... Measurement distance

W ... Image width

H ... Image height

w ... Pixel width

h ... Pixel height


PYROVIEW 640F



High-resolution infrared cameras for temperature measurement through flames

Dimensional drawings Dimensions: PYROVIEW 640F in compact+ housing | 175,3 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 | 150 |

Difficultions. FTROVIEW 0401 III protection flouring

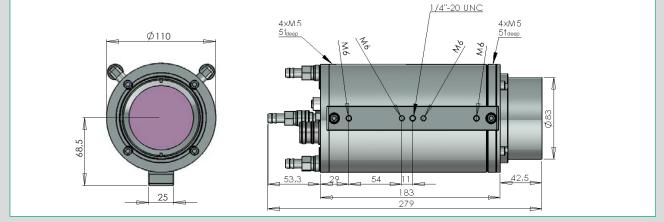

Connectors




Accessories ¹	Part number
Ethernet cable (8 pin) M12-RJ45/Cross/5 m	2301A32005
Connection set for Ethernet interface 8 pin for compact+ housing	2301A04101
Mounting set for compact+ housing	1402A16901
¹ More accessories available.	

PYROSOFT




Powerful online and offline software for DIAS infrared cameras

PYROSOFT Compact

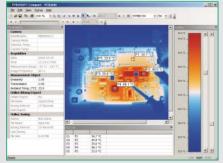


- Online data acquisition of one DIAS infrared camera
- Open and edit archived measured data and sequences
- Bitmap and video export
- Online data storage and online bitmap export
- Definition of regions of interests (ROI): points, lines and rectangle
- Generating of reports in Microsoft® Word format by integrated report function
- Context-sensitive help system (F1 key)
- Included in the scope of delivery of every PYROVIEW infrared camera

PYROSOFT Professional

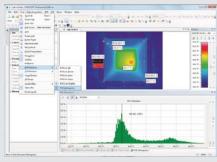

- Online data acquisition Analyze, store and export data in real-time
- Open and edit archived measured data and sequences
- Multi document structure for several documents
- Bitmap, video and text export
- Definition of regions of interests (ROI) and values of interests (VOI) with alarm calculation, histogram and trend chart
- Numerous interface possibilities for processes (PROFIBUS, PROFINET, WAGO, TCP-Socket, Text IO)
- Reporting function, context-sensitive help system (F1 key)
- PYROSOFT Professional IO offers optionally a bidirectional data interface via PROFIBUS, PROFINET, WAGO, MODBUS, OPC, TCP Socket to process control systems, controllers and other applications


PYROSOFT Automation

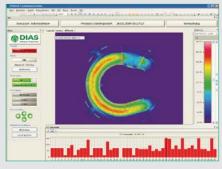

DIAS has developed the software PYROSOFT Automation for the integration of infrared cameras in automation processes.

- Comfortable product management with free definable document templates
- Product choice and release control can be made manually or automatically
- Different user levels for operator, tool setter and administrator
- Functionality of PYROSOFT Professional for administrators
- Automatic logging of system messages, measured data and alarms
- Easy to use and configurable user interface for application in fabrication
- Learning functions for automatic adjustment of alarm threshold
- Offline viewer for belated data analysis
- Bidirectional data interface via PROFIBUS, PROFINET, WAGO, MODBUS, OPC,
 TCP Socket to process control systems, controllers and other applications

PYROSOFT DAQ

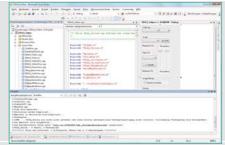

For users who want to make an integration into their software environment by themselves, we offer an own online and offline DLL interface for DIAS infrared cameras.

- API (DLL) for direct data access under Windows®
- Support for DIAS IRDX file format
- Setting of data acquisition parameters and object properties
- Query of temperature values and camera information
- Functions for displaying of images and palettes as bitmap
- Online and offline function

More software packages are available, for example:

PYROSOFT MultiCam (process software for monitoring up to 8 cameras), PYROSOFT CamZone (software for programming a stand-alone camera), application specific software like PYROSOFT FDS for DIAS fire detection systems.



We are certified for many years according to ISO 9001 Phone: +49 351 896 74-0 Fax: +49 351 896 74-99 E-Mail: info@dias-infrared.de Internet: www.dias-infrared.com DIAS Infrared GmbH Pforzheimer Straße 21 01189 Dresden Germany